

# CG-30,CG-50,CG-101,CG-100SD,CG-61,MC-300 など ピンチローラー交換手順書 2


このたびは、ピンチローラー交換用キット (SPC-0746) をお買い上げいただきありがとうございます。

ピンチローラーの交換時には、以下の部品を使用してください。


部品名称	数量	備考
ピンチローラー	1	
止めネジ	2	交換時には使用しません。
弓形 E リング	1	湾曲している方の E リングを使って、交換作業をしてください。
E リング	1	交換時には使用しません。
ワッシャー	2	

## ピンチローラーを交換する

1. プロッタの電源を切り、クランプレバーを上げます。
2. ピンチローラーの下に紙を敷きます。
3. 弓形 E リングの閉じている側にテープを貼り、精密ドライバーで引っかけて外します。

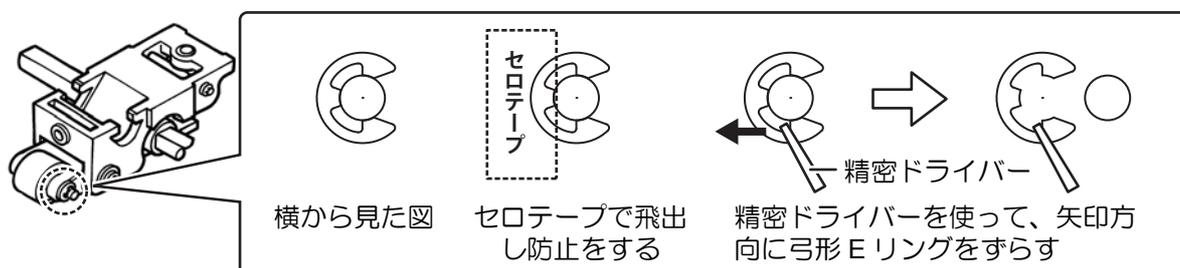

4. P・R 軸を水平に引き抜きます。
  - ・状態によっては、軸が抜きにくかったり、入れにくい場合があります。
5. P・R 軸を抜いた逆の手順でピンチローラーとワッシャーを入れ、ラジオペンチなどで弓形 E リングを取り付けてください。
  - ・ワッシャーを入れるときは、ピンセットを使うと入れやすくなります。
  - ・交換作業が終了しました。

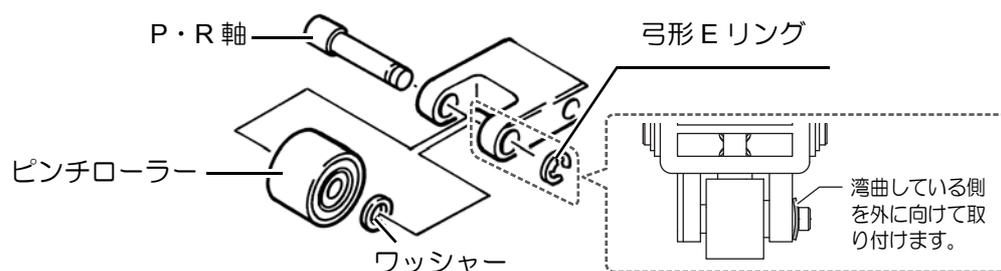

# CG-30,CG-50,CG-101,CG-100SD,CG-61,MC-300 etc. Procedure Manual for Replacing Pinch Roller 2


Thank you very much for your purchasing our kit for replacing pinch roller (SPC-0746).

Use the parts below at replacing the pinch roller.

Part name	Quantity	Remarks
Pinch roller	1	
Setscrew	2	Is not used at replacement.
Arched E-ring	1	Use the arched E-ring to perform replacing work.
E-ring	1	Is not used at replacement.
Washer	2	

## Replace the pinch roller

1. Turn off the power supply of the plotter, and raise the clamp lever.
2. Put a piece of paper under the pinch roller.
3. Paste scotch tape on the closed side of the arched E-ring, and remove it by hooking with a precision screwdriver.

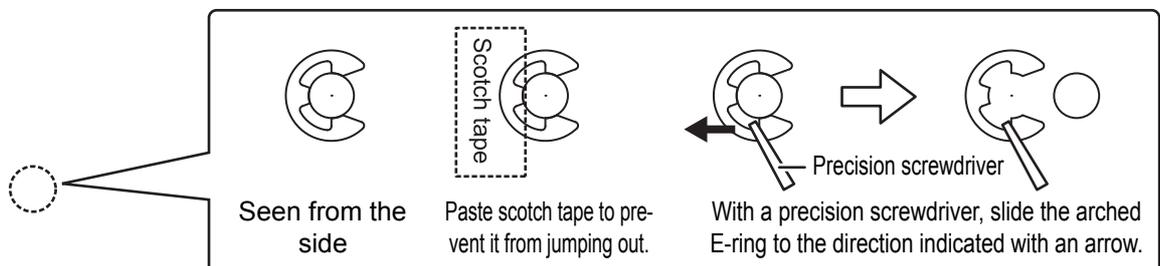

4. Pull out the P/ R shaft horizontally.
  - Depending on the status, the shaft may be hard to be pulled out/ inserted.
5. Insert the pinch roller and the washer in the reverse procedures of removing the P/ R shaft. Attach the arched E-ring with a needle-nose plier etc.
  - When inserting the washer, it is easier for you to perform the work with tweezers.
  - This is the end of the replacing work.

