

# メディアセット時の注意事項

取扱説明書の第2章「メディアをセットする」でロールメディアをセットする際の注意を以下に示します。本紙をお読みになり、十分理解してから、正しくメディアをセットしてください。




- メディアのセットに誤りがある場合、ヘッド破損の原因になります。

## (1) ロールホルダを正しい位置にセットしてください。

⇒取扱説明書 P.2-8 手順 1


本体背面の左側ロールホルダ（本体正面から見てメディアの右端）は、紙管のサイズ（2インチまたは3インチ）によって固定する位置が決まります。下記に従い、正しい位置にセットしてください。

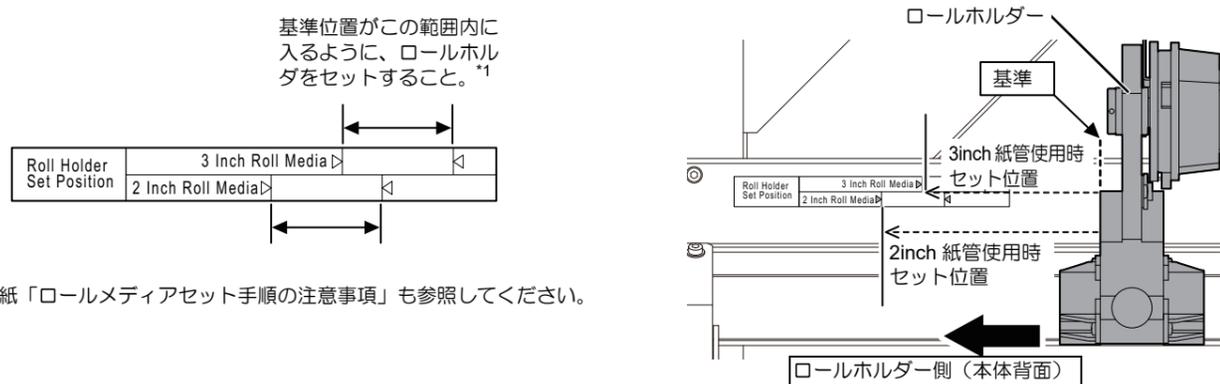

⇒別紙「ロールメディアセット手順の注意事項」も参照してください。



- \*1) 本装置でセット可能な最大幅のメディアを使用する場合、メディア幅が▽より内側になるようにセットしてください。

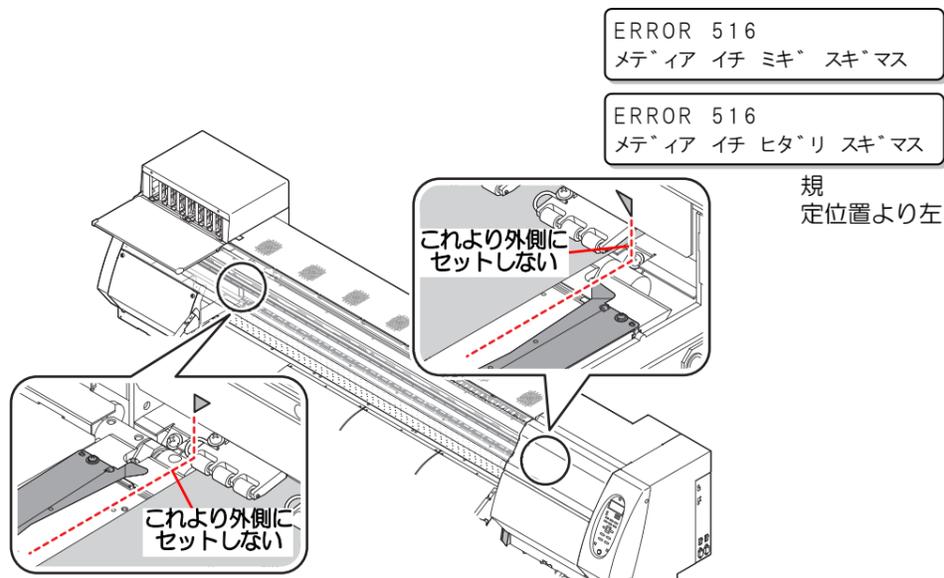

## (2) メディアが斜行しないようにセットしてください。

⇒取扱説明書 P.2-9 手順 8,9

軽くロックがかかる位置まで、ロールメディアを静かに引き出します。その位置で、メディアを均等に引き出すようメディアの数箇所を軽く引っ張ります。このとき、ロックが解除されないようにしてください。確認後、クランプレバーを下げます。


## (3) メディア押さえの位置を確認してください。

⇒取扱説明書 P.2-10 手順 11

正しくセットされると、右側のメディア押さえは下図の位置となります。



- ▽より外側にメディアをセットしないでください。メディアが斜行した場合、メディアが浮き上がりヘッドを破損する原因になります。
- メディアは、プラテンの黒い部分に 40mm 程度出した状態でセットしてください。これより短いと、メディア検出ができない場合があります。

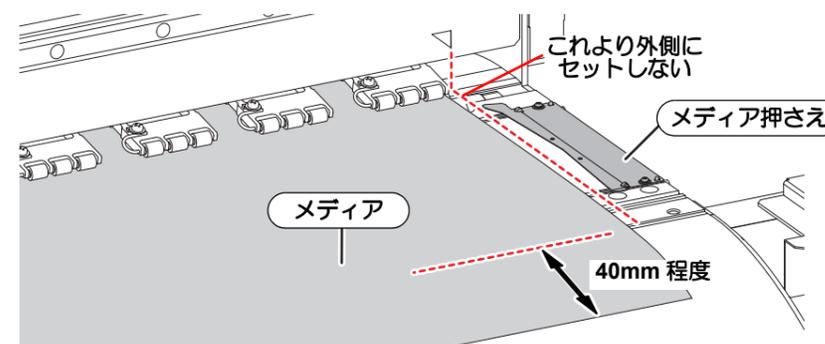

- メディアが規定位置より右に寄っていると、メディア検出後、警告が表示されてセットし直しとなります。

ERROR 516  
メディア イチ ミキ` スキ`マス

# Note for Media Setting

Note for setting roll media on "Setting medias" in Operation Manual Chapter 2 is described below. Read this and fully understand, and then set media correctly.




- Wrong setting of media could break the head.

## (1) Set a roll holder on the correct position.

⇒ Operation Manual P.2-9 Step1


The fixing position of the roll holder on the left back of this machine (On the right corner of a media from the front of this machine) is decided according to the size of media core (2 inch or 3 inch). Set the correct position as follows.

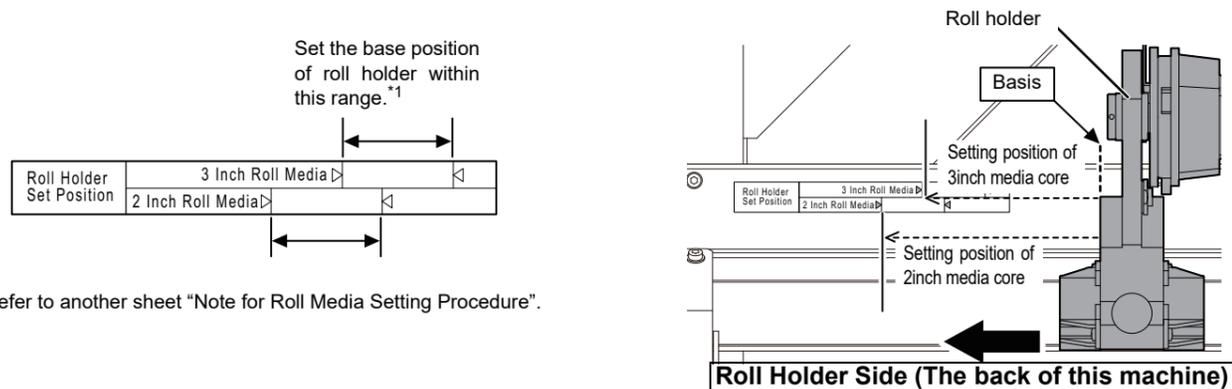

⇒ Refer to another sheet "Note for Roll Media Setting Procedure".



\*1) In case of using media with settable maximum width, set this so that the media width can be more inside than  $\nabla$ .

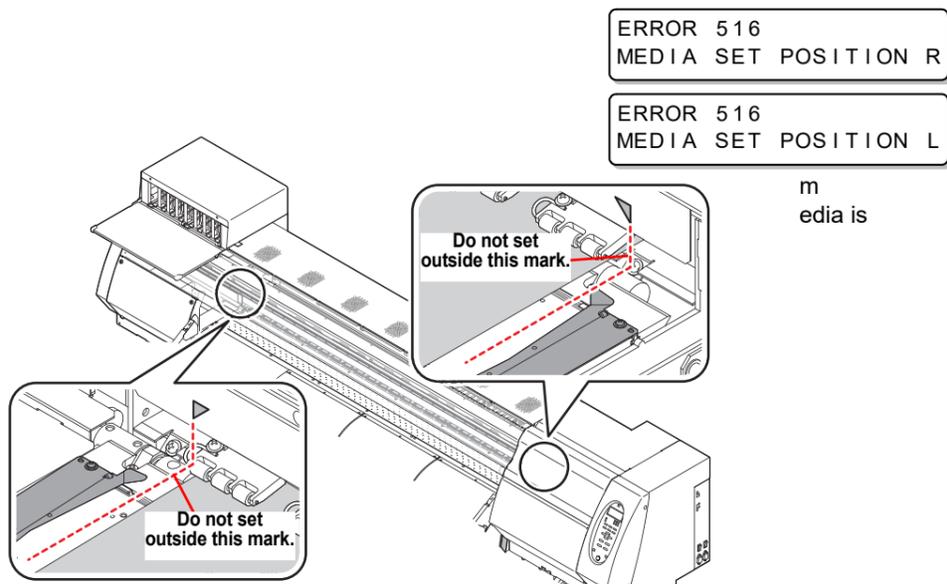

## (2) Set media so as not to tilt.

⇒ Operation Manual P.2-9 Step8,9

Pull a roll media out softly until the media is locked lightly.

On the locked position, pull some places of the media lightly and pull it out evenly.

When pulling the media, do not unlock.

After checking, push the clamp lever down.


## (3) Check the position of media press.

⇒ Operation Manual P.2-10 Step11

When the media is correctly set, the media press on the right is set as the figure below.



- Do not set the media outside  $\nabla$ . As media may tilt and be lifted, it could break the head.
- Set the media on the black part of the platen so that it comes out approximately 40mm. If it is shorter than that, it may not be able to perform the media detection.

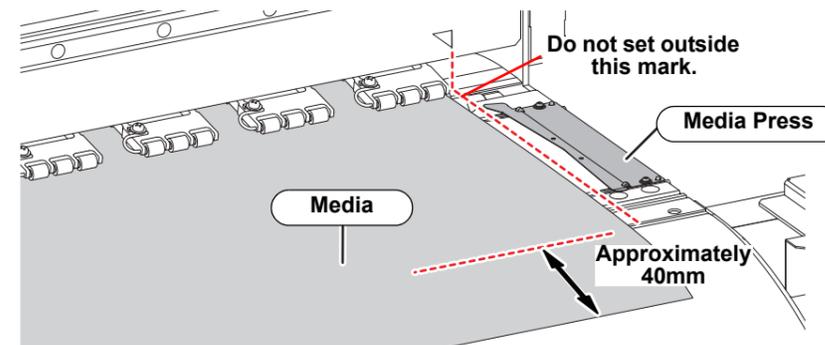

- If a media is misaligned to the right more than fixed position, a warning is displayed. Set the media again.

ERROR 516  
MEDIA SET POSITION R